





Installationsanleitung Gerätefamilie MSB Installation Instructions Family MSB


■ MSB10C

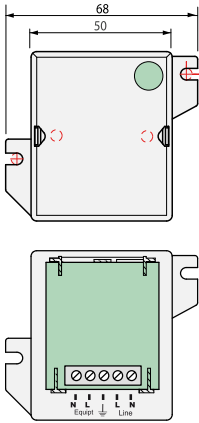


■ MSB10V

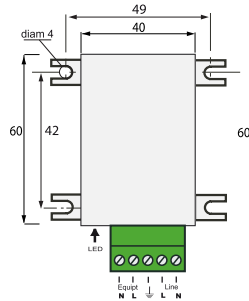

■ MSB10

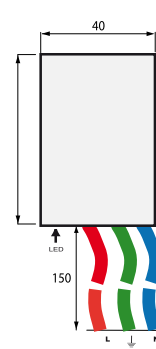


■ MSB6

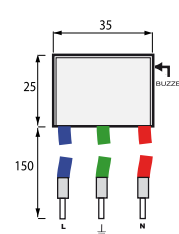


Anwendungsbeispiele:


■ MSB6 Steckdose

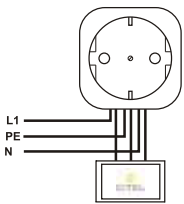


■ MSB6 Abzweigdose

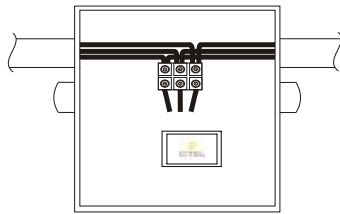


■ BK
MSB6 / MSB10

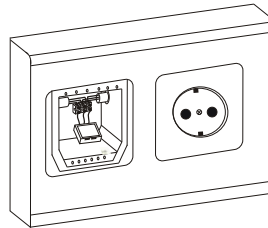

■ BK
MSB10V / MSB10C

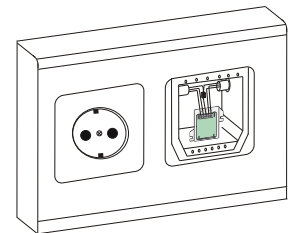

■ Fault Indication / Defektanzeige equipment MSB / Gerät MSB

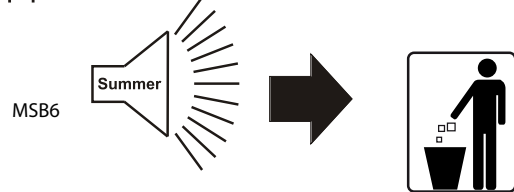


■ Technical Data / Technische Daten

Typ	MSB10C / MSB10V / MSB10 / MSB6
U _c	255 V ~
max. I	16 A gL/gG
θ°C	-20° bis +60°

■ Backup Fusion/ Vorsicherung

USM	
F1	F1 > 16 A gL ↓ F2 = 16 A gL
F2	F1 ≤ 16 A gL ↓ ⊗

MSB10V / MSB10C / MSB10

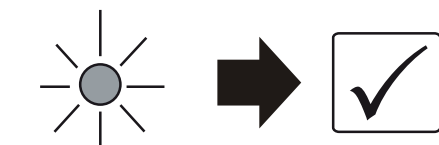

Optische Anzeige

MSB10V / MSB10C / MSB10

